

E-612.C0
E-661.CP

High-Speed NanoAutomation® Controllers

Ordering Information

E-612.C0
High-Speed NanoAutomation®
Controller, Parallel Port, OEM Board

E-661.CP
High-Speed NanoAutomation®
Controller, Parallel Port, Bench -Top

E-501.10
Bench-Top Chassis and Power Supply
for 1 to 4 E-612.C0 Modules

Custom Designs
for Volume Buyers



E-501.10 chassis with four E-612.C0 modules

Notes

Important Calibration Information:
Please read details on page 6-41.

- OEM Modules and Bench-Top Versions
- Controls LVPZT NanoPositioners with Capacitive Sensors
- Opto-Isolation for EMI Immunity
- 10 μ s Parallel Command Port
- Integrated PZT Power Amplifier

The E-612.C0 is a high-speed, parallel-command-port amplifier and position servo-controller module for closed-loop LVPZT NanoPositioners and Actuators with integrated capacitive displacement sensors.

Standard versions come with a 10 μ s/command, 16-bit, electrically isolated input port for enhanced EMI immunity.

An additional high-bandwidth 0 to 10 V control input is available for analog control.

The E-612.C0 controller module is also equipped with a PZT voltage amplifier, providing -20 to 120 V with 80 mA sink and source capability.

The E-661.CP module is the compact, bench-top, stand-alone version of the E-612.C0. It comes with a metal case for EMI protection and an external power supply.




E-661.CP high-speed bench-top
NanoAutomation® controller

Technical Data (Chassis & Power Supply)

Models	E-501.10
Function	Chassis for 1 - 4, E-612.C0, high speed NanoAutomation® controller modules
Operating voltage	90-120 VAC, 50-60 Hz 220-264 VAC, 50-60 Hz
Power supply	linear regulated power supply, integrated
P/S Output voltages	+130 V, 0.2 A; -27 V, 0.2 A +24 V, 1 A; \pm 15 V, 0.5 A +5V, 1 A
Max. power consumption	50 W
Primary fuse	0.63 A slow
Dimensions	W: 235, H: 158; D: 288

PZT Actuators
PZT Flexure NanoPositioners
PZT Active Optics / Steering Mirrors
Tutorial: Piezoelectrics...
Capacitive Position Sensors
PZT Control Electronics
MicroPositioners / Hexapod Systems
Photonics Alignment & Packaging Systems
Motor Controllers
Index

<http://www.pi.ws>
info@pi.ws

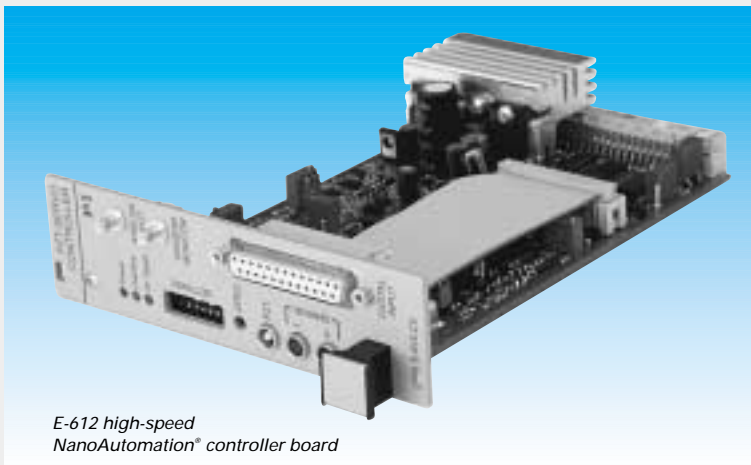

E-612 high-speed NanoAutomation® controller board

Technical Data (Controller)

Models	E-612.C0	E-661.CP
Function	high-speed NanoAutomation® controller module	bench-top high-speed NanoAutomation® controller
Channels	1	1
Capacitive Sensor Circuit		
Clock frequency	1.6 MHz	1.6 MHz
Bandwidth	1.5 kHz	1.5 kHz
Amplifier		
Output voltage range	-20 to +120 V	-20 to +120 V
Output power	8 W	8 W
Output current	80 mA (avg. & peak)	80 mA (avg. & peak)
Current limitation	Short-circuit proof (5 minutes, shut-down)	Short-circuit proof (5 minutes, shut-down)
Bandwidth (no load)	> 500 Hz	> 500 Hz
Digital Circuit		
Data	16-bit	16-bit
Input level	TTL	TTL
Timing	THmin 10 µs; TLmin 10 µs	THmin 10 µs; TLmin 10 µs
Input current	10 mA	10 mA
On-target indication	On: target position ± ≤0.025% to 0.2%, jumper selectable	On: target position ± ≤0.025% to 0.2%, jumper selectable
Analog Input / Output		
Control voltage range	0 to 10 V	0 to 10 V
Input impedance	10 kΩ, 1 nF	10 kΩ, 1 nF
Sensor Monitor Output		
Voltage range	-10 to +10 V (jumper selectable)	-10 to +10 V (jumper selectable)
Output resistance	10 kΩ	10 kΩ
Bandwidth	1.5 kHz	1.5 kHz
Connectors		
Digital interface	25-pin-sub-D	25-pin-sub-D
Piezo	LEMO ERA.00.250	LEMO ERA.00.250
Sensor	LEMO EPL.00.250	LEMO EPL.00.250
Sensor monitor	SMB	SMB
Analog input	SMB	SMB
Power Requirements	+5 V, 0.12 A +/- 15 V, 0.16 A +130 V, 80 mA max. -27 V, 80 mA max	15 V, 2 A (external power supply included)
Dimensions	Euroboard (64-pin rear connector. Mating extender card: Mod. P-896.00)	125 x 50 x 262 mm